


### ■ Display information

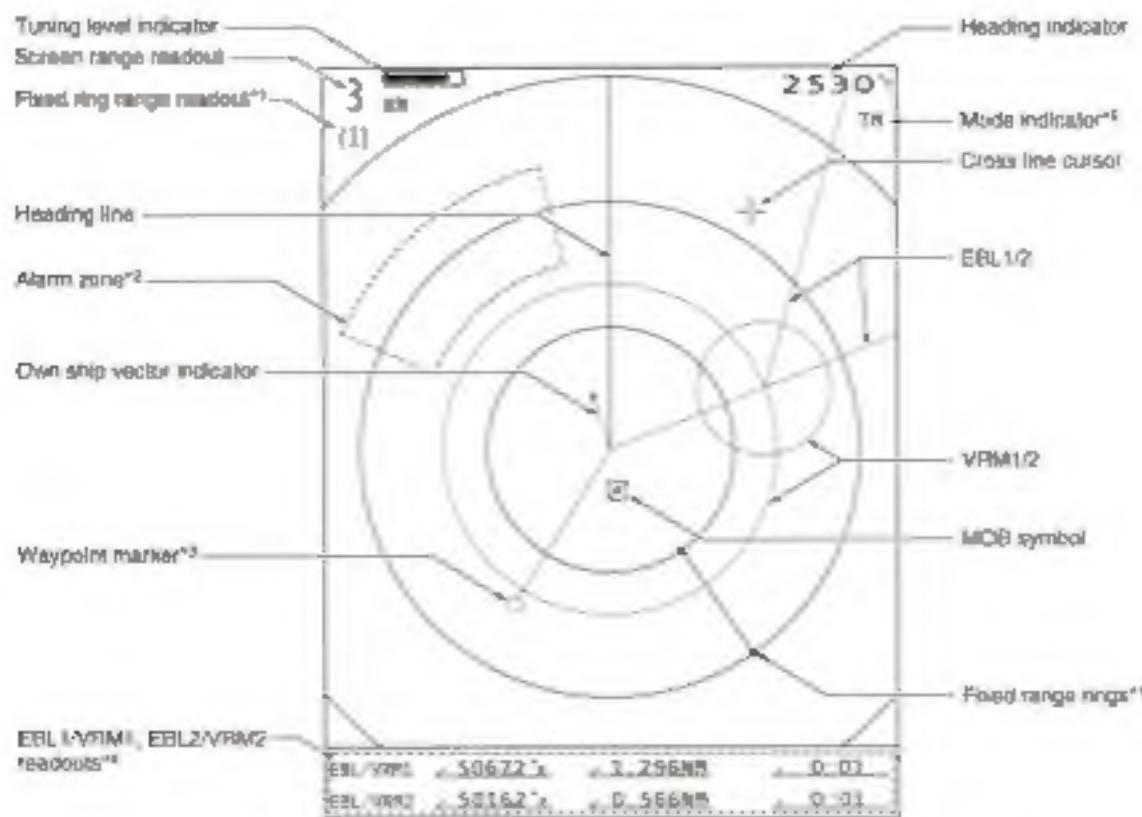

\*Appears when the "RING" of the FUNCTION menu is turned ON.

<sup>\*\*</sup> Appears when the alarm function is in use.

\*Appears when the "WPT" of the FUNCTION menu is turned ON. To display the waypoint marker, bearing data and NMEA data with 0183 format is necessary.

\* This area may differ depending on DATA DISP selection in the FUNCTION menu. Nautical miles (NM) and kilometers (KM) can be selected in the INT. SETTING menu as the distance unit.

- <sup>15</sup> North-up (N UP) and Course-up (C UP) screens require external bearing data. True Motion (TM) screen. Requires bearing data and LOG or position data.

## ■ BRILL menu

Push [BRILL] to select the brilliance adjustment menu.




## ■ ADJ (Adjust) menu

Push [ADJ] to select the adjustment menu.



## ■ Function menu

Push [MENU] to select the function menu.

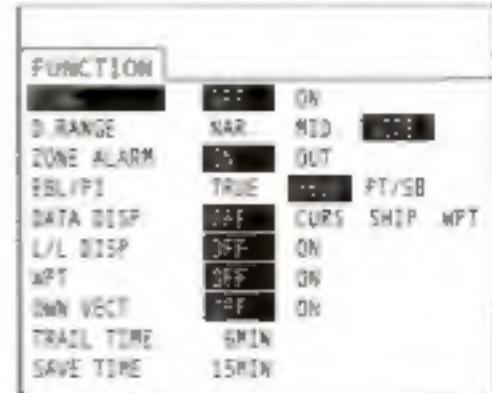

## ■ Control functions

### [TX (SAVE)]

Toggles between the TX mode and the standby mode. Turns the power save function ON when pushed and held.

### [HL OFF]

Push [ADJ] and [MENU] simultaneously to turn off all indications except the PPI (Plan Position Indicator) screen, temporarily.

### [ADJ]

Push to show the adjust menu.

### [UP] [DOWN] [RIGHT] [LEFT]

Set the cross line cursor, alarm area, EPA target, etc. according to the switch pushed.

### [+] [-]

Push to increase or decrease the screen range.

### [MODE]

Push to mark the main overboard point on the screen.

### [ALM]

Toggles the alarm function ON and OFF. Enters the alarm area setting condition when pushed and held.

### [EBL1 (VRM1)]

Displays the electronic bearing line 1 (EBL1) and the variable range marker 1 (VRM1) on the cross line cursor position from own ship.

### [POWER]

Turns power ON and OFF.



### [BRILL.]

Turns the brilliance adjustment menu ON or OFF.

### [MENU]

Toggles the FUNCTION and EPA menu. Push [↑ ↓] keys to select the items and push [< >] keys to change the setting.

### [ZOOM]

Push [MOB] and [TRAILS] simultaneously to toggle the ZOOM function ON and OFF.

### [TRAILS]

Toggles the trail function ON and OFF.

### [OFF CENT.]

Push [ALM] and [MODE] simultaneously to turn the OFF CENTER function ON or OFF.

### [MODE]

Push to select one of Head-up (H UP), Course-up (C UP), North-up (N UP) or True motion (TM) screens.

### [PI]

Push [EBL1] and [EBL2] simultaneously to turn the parallel index line ON.  
Push [EBL1] or [EBL2] to turn the line OFF.

### [EBL2 (VRM2)]

Push to display the electronic bearing line 2 (EBL2) and the variable range marker 2 (VRM2) while EBL1 and VRM1 are displayed on the screen.


### [EPA]

Push to enter the EPA position data.

Push [EPA] for 0.5 sec. to toggle the EPA display and navigation display.

## ■ EPA menu

Push [MENU] twice to select the EPA menu.

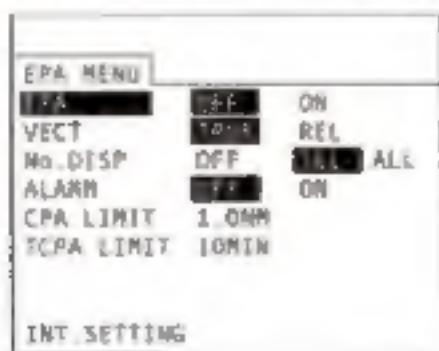

## ■ INT. SETTING menu

Push [MENU] twice to select the EPA menu. Push [↑ ↓] 6 times to select the INT. SETTING menu. Push [>] to enter.

